




Motorola V60s Logic Board Replacement

Written By: Eric Freeman

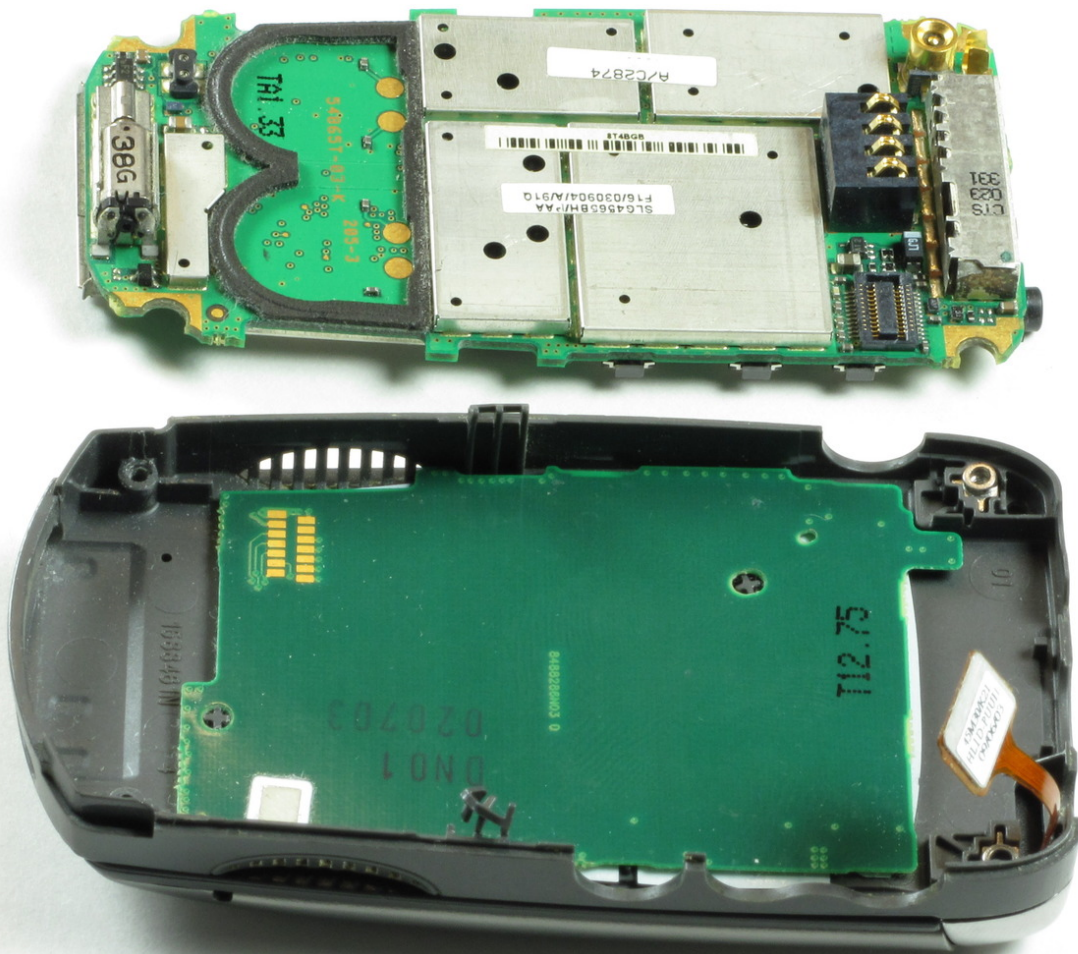

INTRODUCTION

This guide shows how to replace the logic board.



TOOLS:

- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)



PARTS:


- [Motorola V60 Logic Board](#) (1)

Step 1 — Battery



- Remove battery cover by pushing down release lever at top of phone while prying off cover.
- Set cover aside.

Step 2

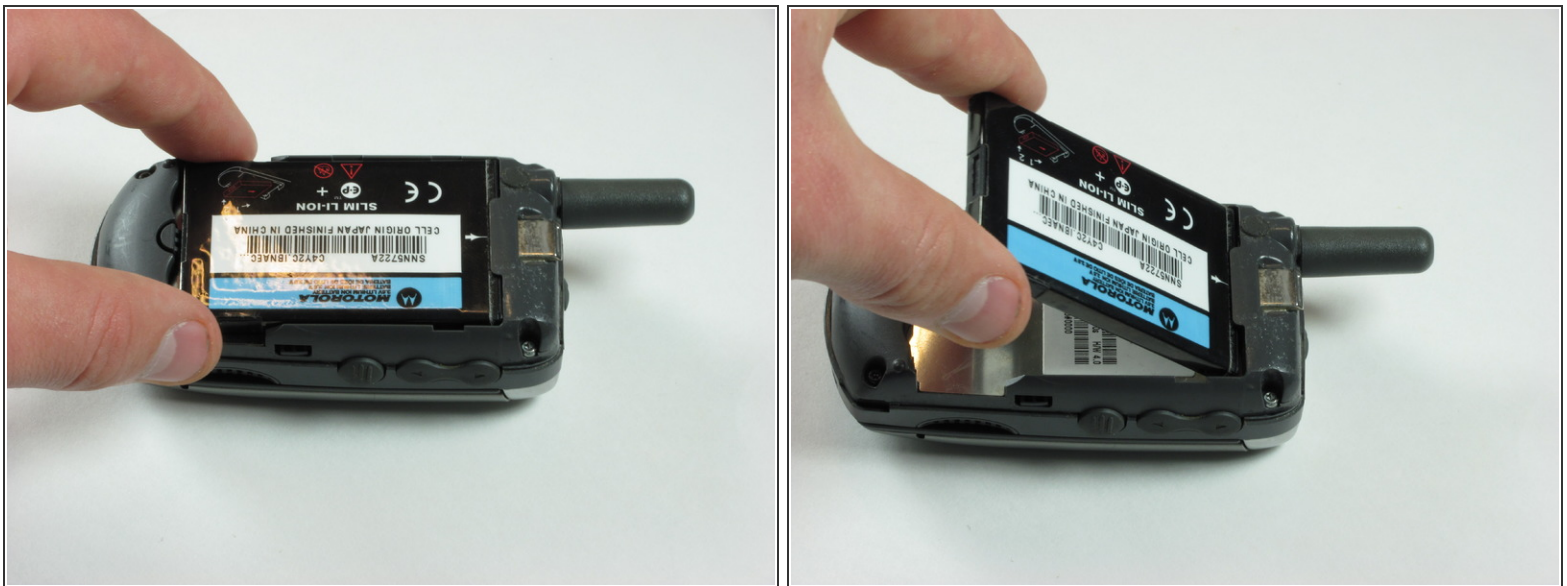


- Remove battery by grabbing it near the bottom and lifting out.

Step 3 — Logic Board




- Unscrew four corner screws with T6 screwdriver.
- Note: The two top screws are short and silver. The two bottom screws are black and long.

Step 4

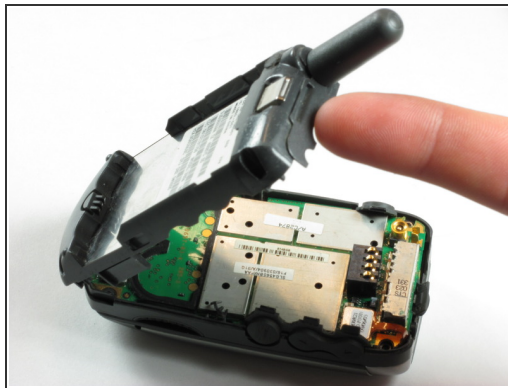


- Use a spudger to gently pry off back chassis. Wedge the spudger in crevice between back panel and phone and lift.

Step 5

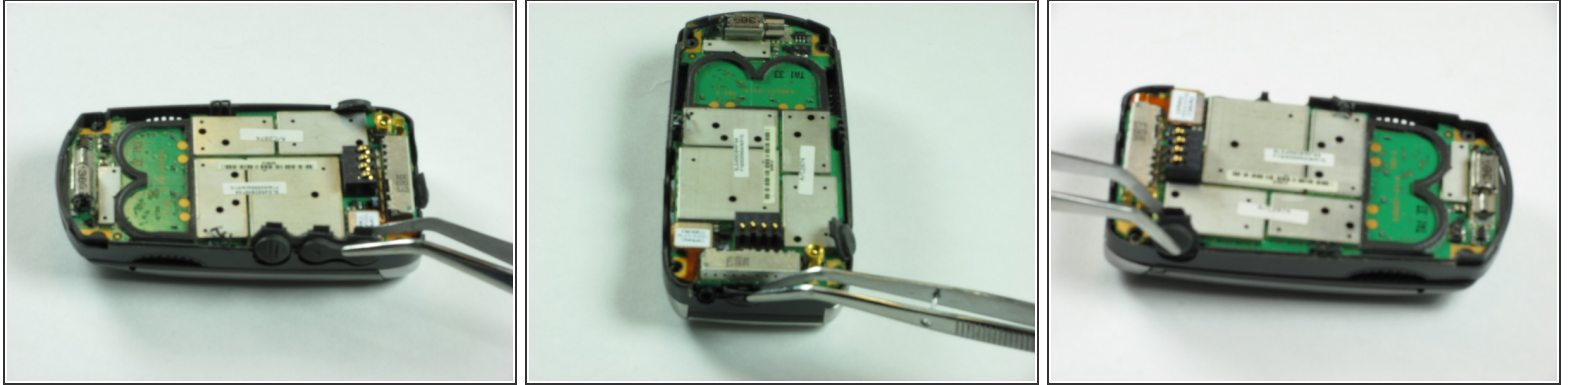



- Starting from left side of phone, remove side buttons and place aside.
- Note: There should be three buttons. One on each side, and the top.
- Return phone to starting orientation when done.

Step 6

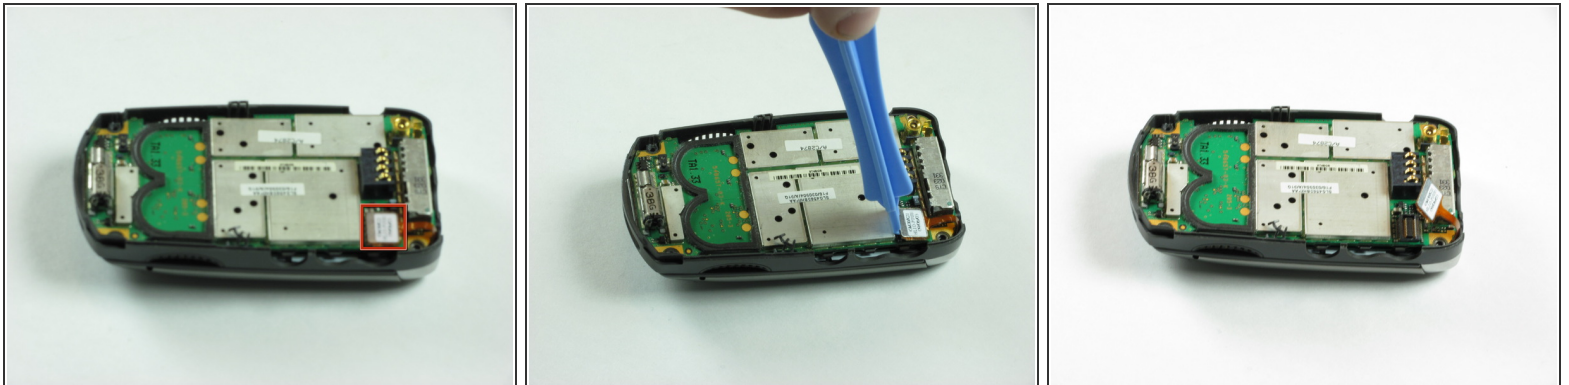

- Gently remove orange ribbon cable by prying up with spudger.

Step 7

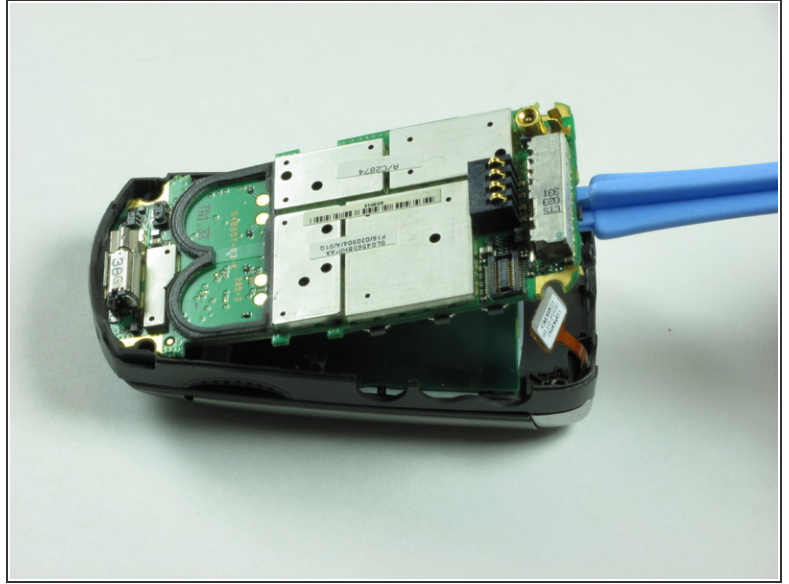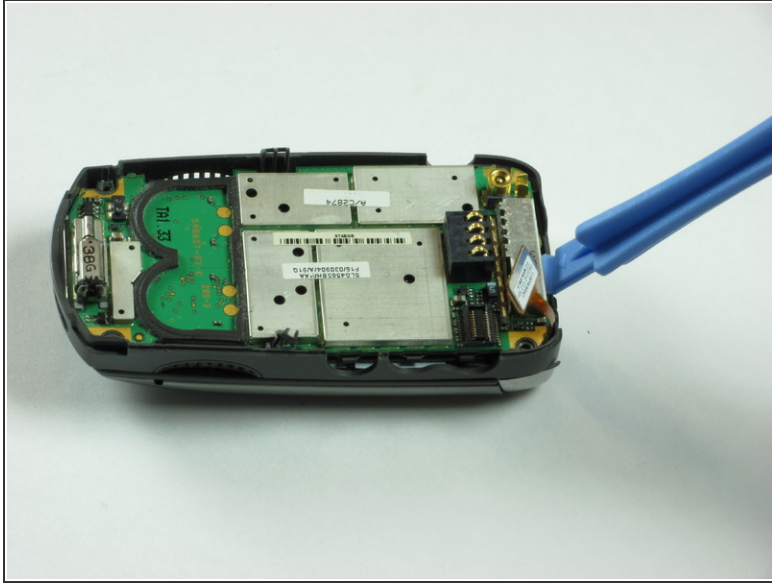

- Use a spudger to pry up logic board by wedging in between logic board and chassis and lifting.
- Note: Orange ribbon cable is fragile and can be broken.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-29 12:10:47 PM.